
YIOSI

INSTALLATION GUIDE

36" Tiered Glass Drum Chandelier

CHANDELIER · CEILING MOUNT

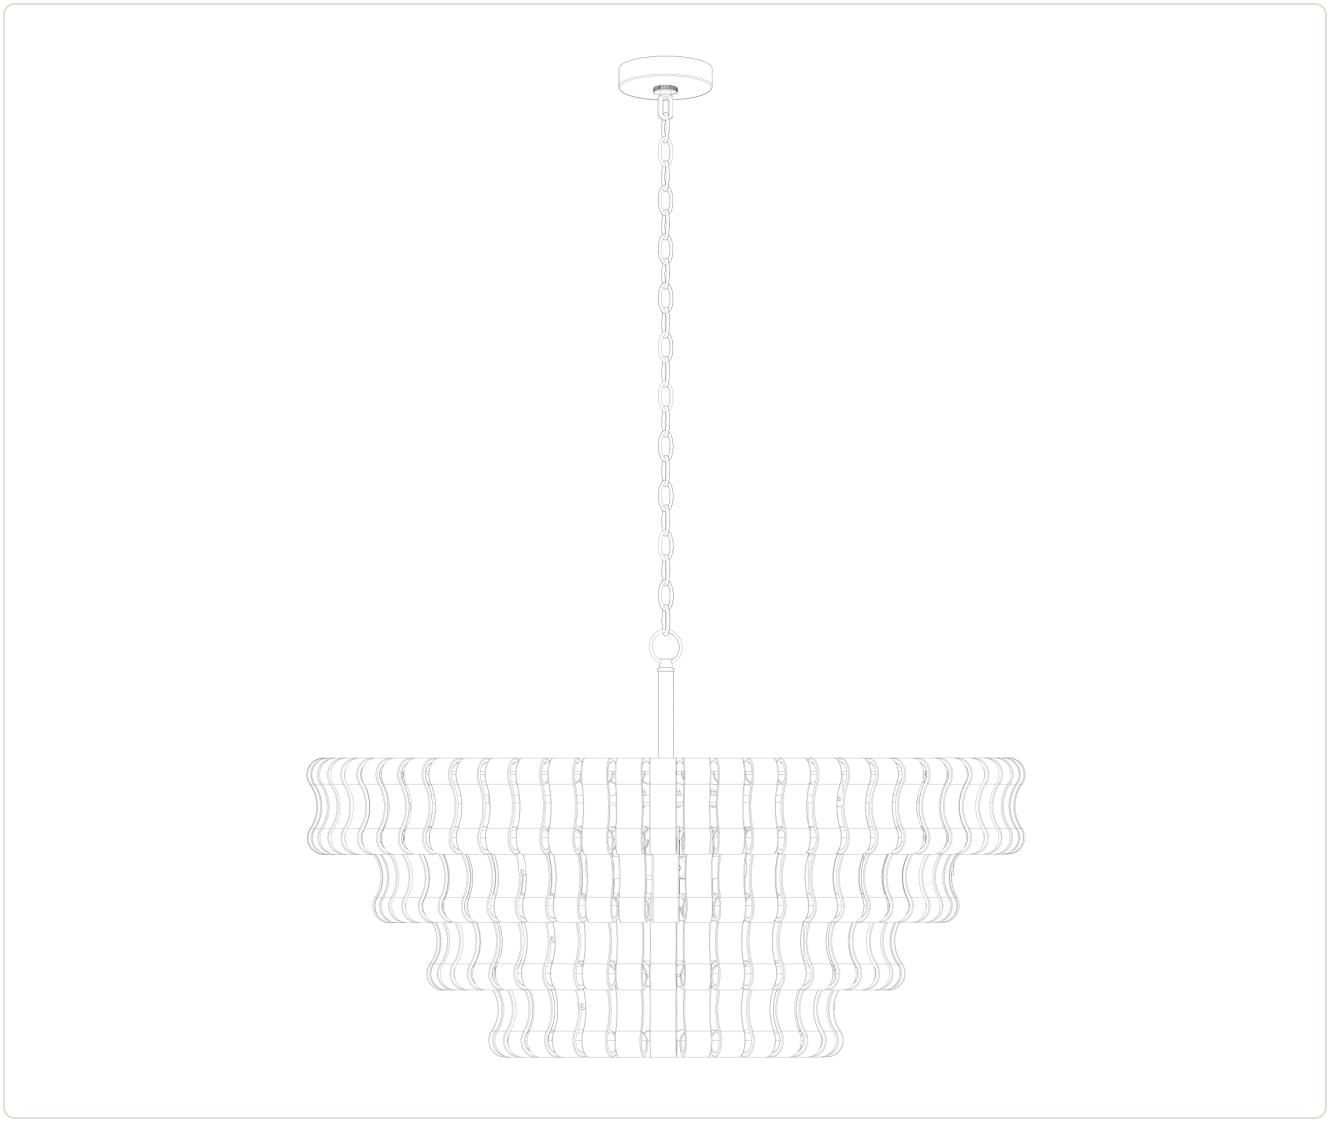

Model **YIOSI-0442** · **YIOSI-0668** · **YIOSI-0744**

Please read this guide completely before you begin, and keep it for future reference.

BEFORE YOU BEGIN

⚠ **WARNING**

- **Turn off the power at the circuit breaker** before installing, changing bulbs or cleaning the fixture.
- Installation by a **qualified electrician** is recommended. Install in accordance with local electrical codes.
- This fixture requires 6 E12 bulbs, max. 40 W each. Do not exceed the rated wattage.
- Do not clean the fixture with corrosive substances such as gasoline or alcohol-based disinfectants.
- Use this fixture only for its intended purpose. Do not modify or rewire it.
- Keep small parts and packaging away from children. They can cause serious injury.


PREPARATION

- Read every step carefully and follow them in order.
- Unpack and check all parts against the parts list. If anything is missing or damaged, contact us before installing (see the last page). We will send replacement parts promptly.
- Assemble the fixture where it will be installed. Moving it mid-assembly risks losing small parts.

SPECIFICATIONS

LIGHT SOURCE	MAX. WATTAGE	MOUNTING
6 × E12 bulbs	**40 W per bulb**	**Ceiling, adjustable chain**

IN THE BOX

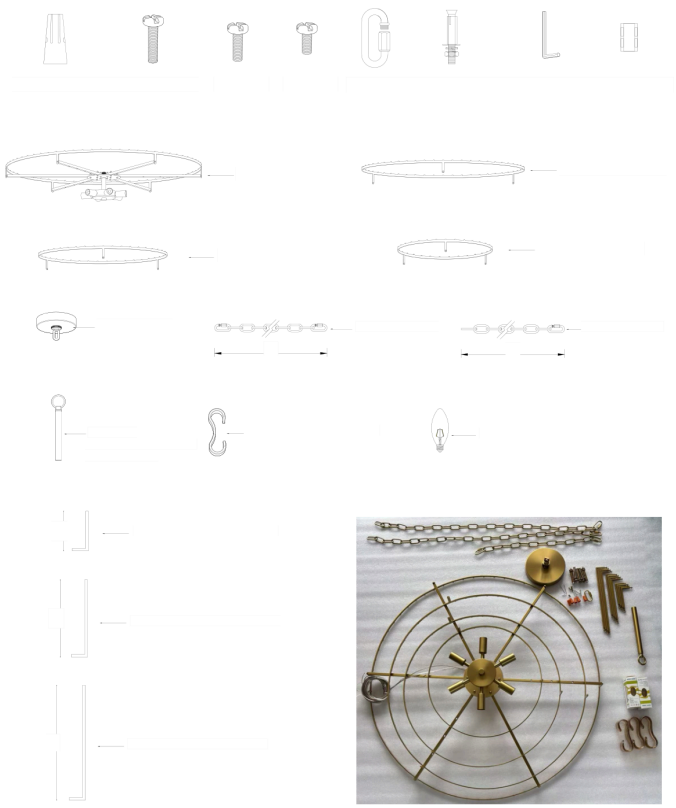


PART	QTY	DESCRIPTION
A–D	× 4	Light frame (one each)
E	× 1	Canopy
F, G	× 2 + 1	Chain: 2 long (40"), 1 short (20")
H	× 1	Boom
I–K	× 12	Connector: 4 each of short 3.5", middle 6.8", long 8.6" (incl. 1 spare each)
L	× 198	Glass piece (incl. 5 spare)
M	× 8	E12 light source (incl. 2 spare)
—	× 1	Hardware kit (screws, wire connectors, anchors, hooks)

INSTALLATION

STEP 1

Assemble the frame


Find frames A, B, C and D and join them with the short, middle and long connectors (I, J, K), as shown.

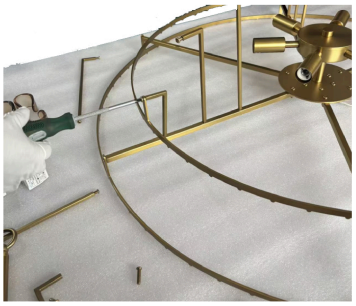


STEP 2

Fit the boom and chains

Run the power cord through the boom (H) on the frame. Latch the chain to the boom at one end and to the canopy (E) at the other, and feed the power cord up into the canopy.

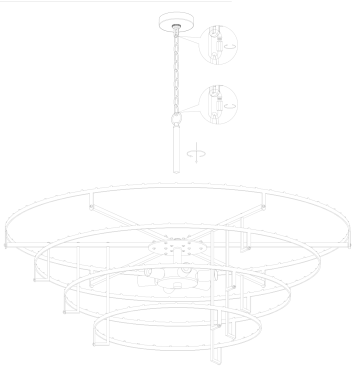


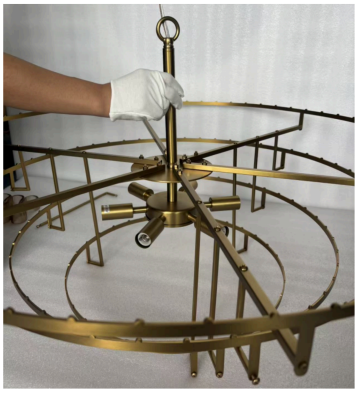

STEP 3

Mount and wire the canopy

Turn off the power at the circuit breaker. Take out the mounting plate and fix it to the ceiling with the expansion screws. Pass the support wire through the holes in the mounting plate and secure it. Join the fixture wires to the matching house supply wires with the wire connectors: live to live, neutral to neutral, ground to ground. Then fix the canopy cover in place.

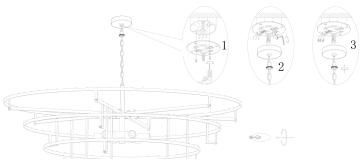




STEP 4

Fit the bulbs and glass

Screw the six E12 bulbs (M) into the lamp holders. Hang the glass pieces (L) on the frame in the quantity marked for each layer (65, 54, 43 and 31 pieces). Restore power and switch on to test.

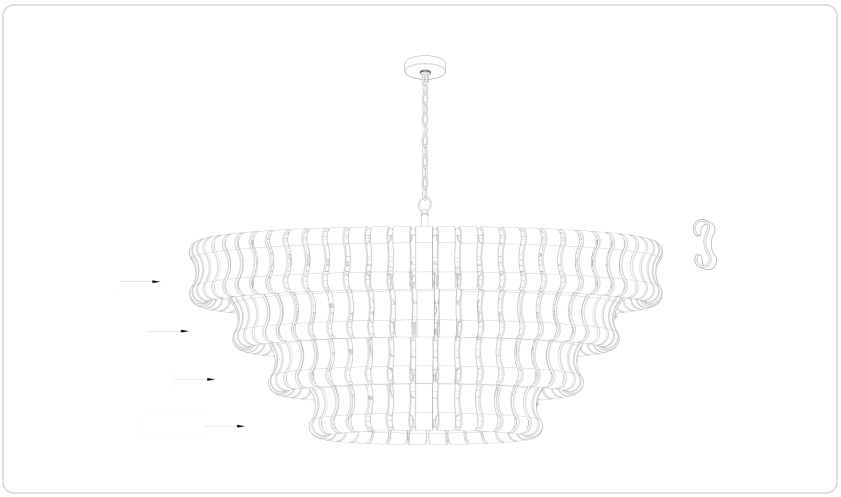

CARE & SUPPORT

CLEANING & CARE

- Clean the fixture about once a month to keep it looking its best.
- Turn off the power and let the fixture cool to room temperature first.
- Wipe with a soft cloth dampened with water and wrung dry. Never spray liquid directly onto the fixture.
- Do not use gasoline, alcohol or other corrosive cleaners.

GOOD TO KNOW

- Use the fixture only as designed. Damage caused by modification, third-party parts or natural disasters is not covered.
- Warranty terms are listed at yiosilamp.com.

NEED HELP?

support@yiosilamp.com

+1 970-896-9411

Missing parts, installation questions or anything else, we are here to help. Please include your order number and a photo of the issue so we can resolve it quickly.