
YIOSI

INSTALLATION GUIDE

48" Hook Plate Glass Round Chandelier

CHANDELIER · CEILING MOUNT

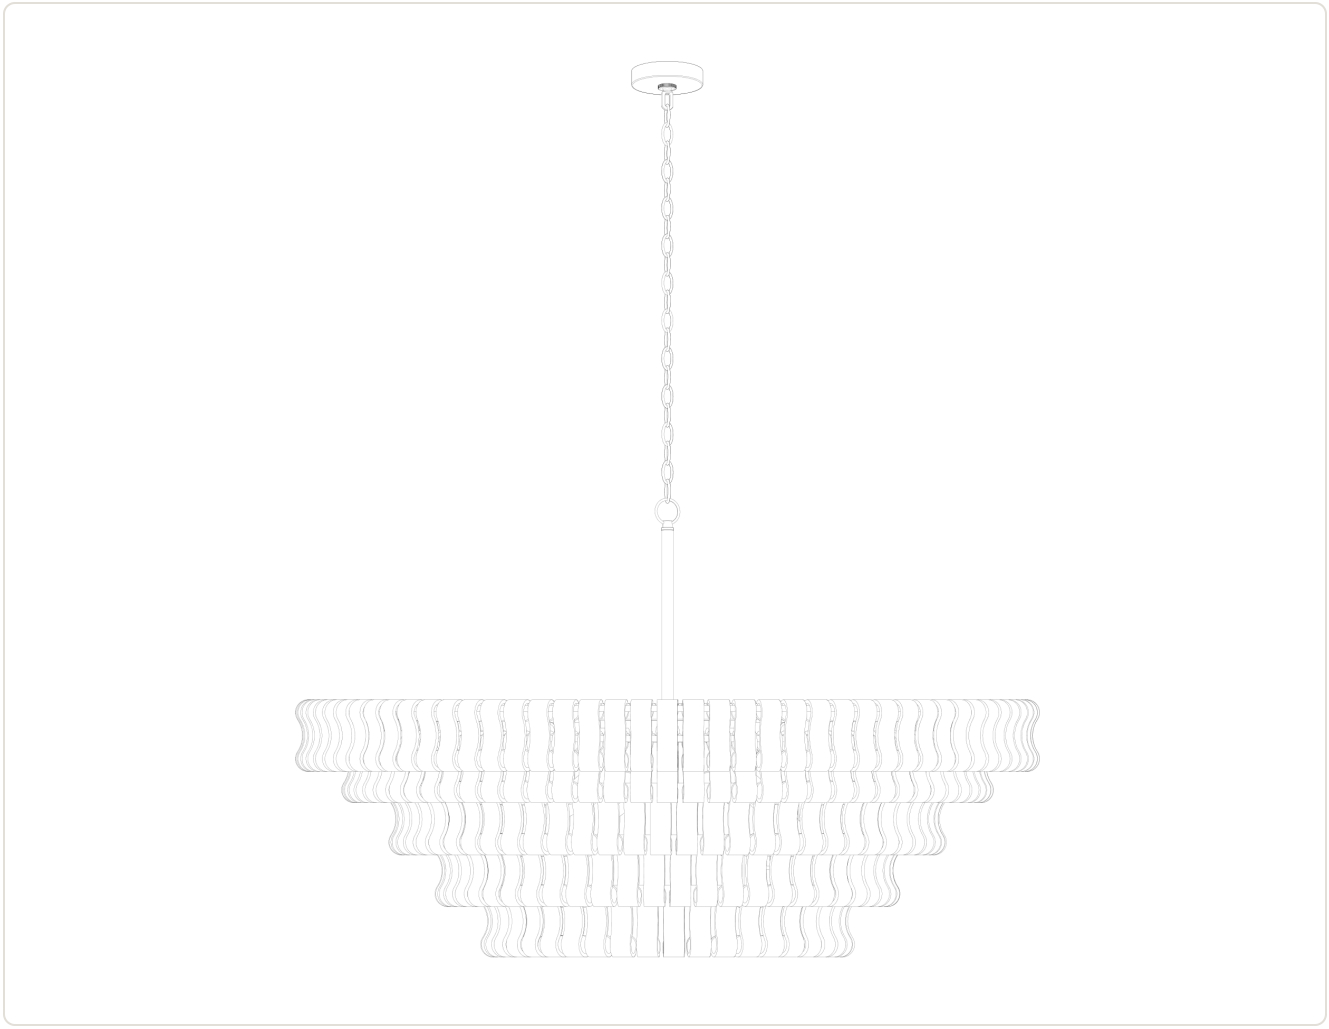

Model **YIOSI-0669** · **YIOSI-0670** · **YIOSI-0879**

Please read this guide completely before you begin, and keep it for future reference.

BEFORE YOU BEGIN

⚠ **WARNING**

- **Turn off the power at the circuit breaker** before installing, changing bulbs or cleaning the fixture.
- Installation by a **qualified electrician** is recommended. Install in accordance with local electrical codes.
- This fixture uses 12 E12 bulbs (3 W, 2700K bulbs included), max. 40 W each. Do not exceed the rated wattage.
- Do not clean the fixture with corrosive substances such as gasoline or alcohol-based disinfectants.
- Use this fixture only for its intended purpose. Do not modify or rewire it.
- Keep small parts and packaging away from children. They can cause serious injury.


PREPARATION

- Read every step carefully and follow them in order.
- Unpack and check all parts against the parts list. If anything is missing or damaged, contact us before installing (see the last page). We will send replacement parts promptly.
- Assemble the fixture where it will be installed. Moving it mid-assembly risks losing small parts.

SPECIFICATIONS

LIGHT SOURCE	MAX. WATTAGE	COLOR TEMPERATURE
12 × E12 bulbs (included)	**40 W per bulb**	**2700K (bulbs supplied)**

IN THE BOX

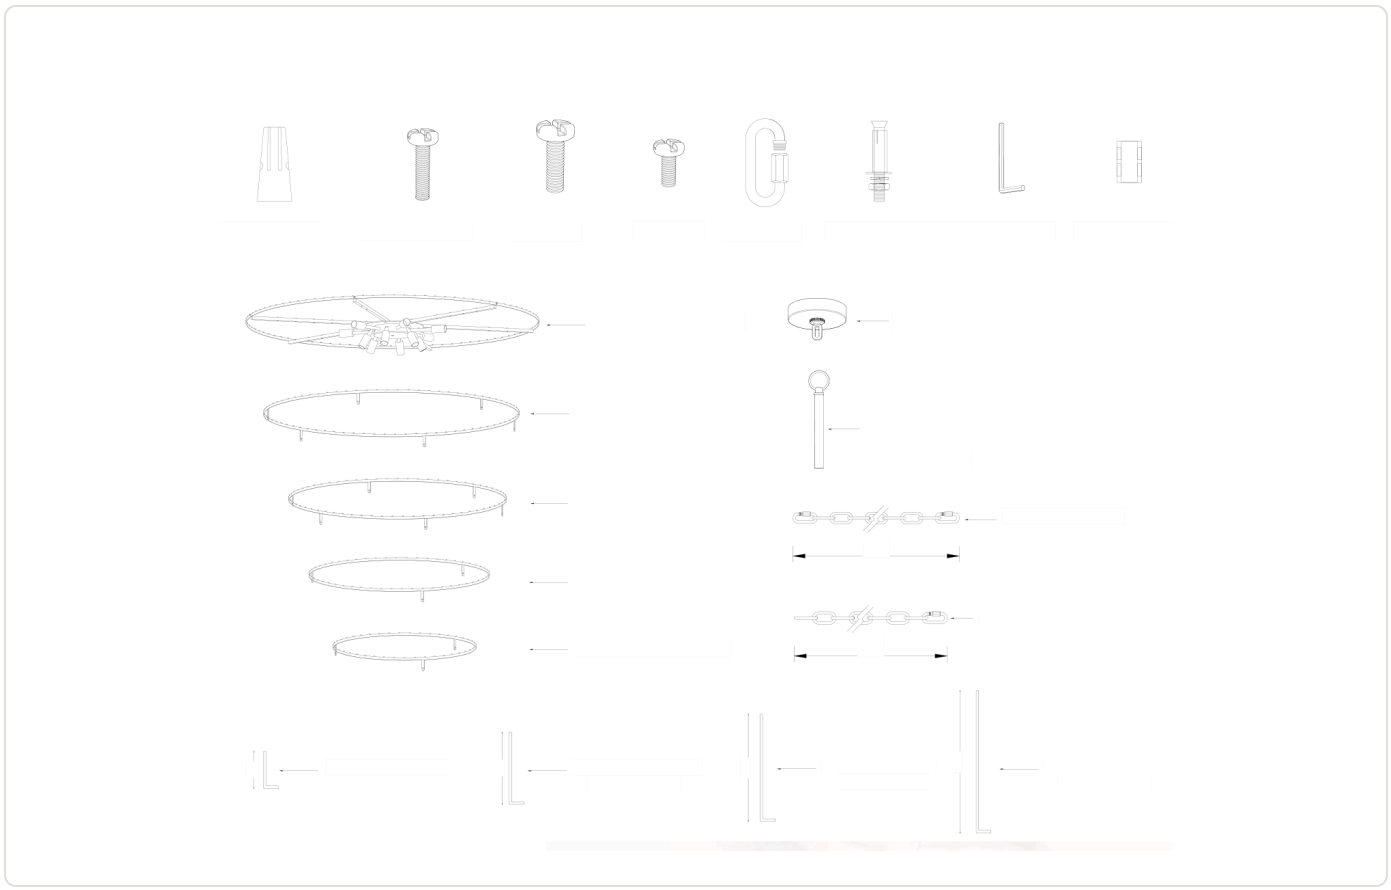


PART	QTY	DESCRIPTION
A–E	× 1 ea.	Light frame rings A, B, C, D, E
F	× 1	Canopy
G	× 1	Boom
H	× 2	Long chain (40")
I	× 1	Short chain (20")
J–M	× 22	Connectors: short J ×7, middle K ×7, long L ×4, long M ×4 (incl. spares)
N	× 331	Glass piece (incl. 5 spare)
O	× 14	E12 bulb (incl. 2 spare)
—	× 1 set	Mounting hardware: screws, expansion bolts, chain links, wire connectors, hex key

INSTALLATION

STEP 1

Assemble the frame

Find frames A to E. Join the frames together with the connectors J, K, L and M, as shown.

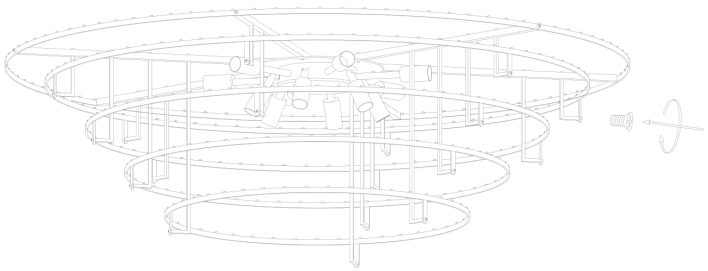

STEP 2

Fit the boom and canopy


Thread the power cord through the boom (G) and fix the boom to the frame. Join the chain ends to the boom and to the canopy (F) with the chain links, and lead the power cord up into the canopy.



STEP 3

Mount and connect

Turn off the power at the circuit breaker. Fix the mounting plate to the ceiling with the expansion screws and hang the fixture from it. Join the fixture wires to the matching house supply wires with the wire connectors: live to live, neutral to neutral, ground to ground. Fasten the canopy, then screw in the 12 E12 bulbs (O).

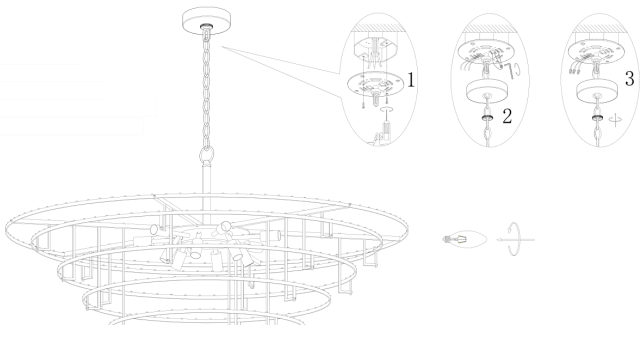

STEP 4

Hang the glass

Hang the glass pieces (N) on the frame tier by tier: 88, 76, 65, 54 and 43 pieces, from the top (largest) tier down. Restore power and switch on to test.



CARE & SUPPORT

CLEANING & CARE

- Clean the fixture about once a month to keep it looking its best.
- Turn off the power and let the fixture cool to room temperature first.
- Wipe with a soft cloth dampened with water and wrung dry. Never spray liquid directly onto the fixture.
- Do not use gasoline, alcohol or other corrosive cleaners.

GOOD TO KNOW

- Use the fixture only as designed. Damage caused by modification, third-party parts or natural disasters is not covered.
- Warranty terms are listed at yiosilamp.com.

NEED HELP?

support@yiosilamp.com

+1 970-896-9411

Missing parts, installation questions or anything else, we are here to help. Please include your order number and a photo of the issue so we can resolve it quickly.