
YIOSI

INSTALLATION GUIDE

Prism Cup Flush Mount 17in

FLUSH MOUNT · CEILING

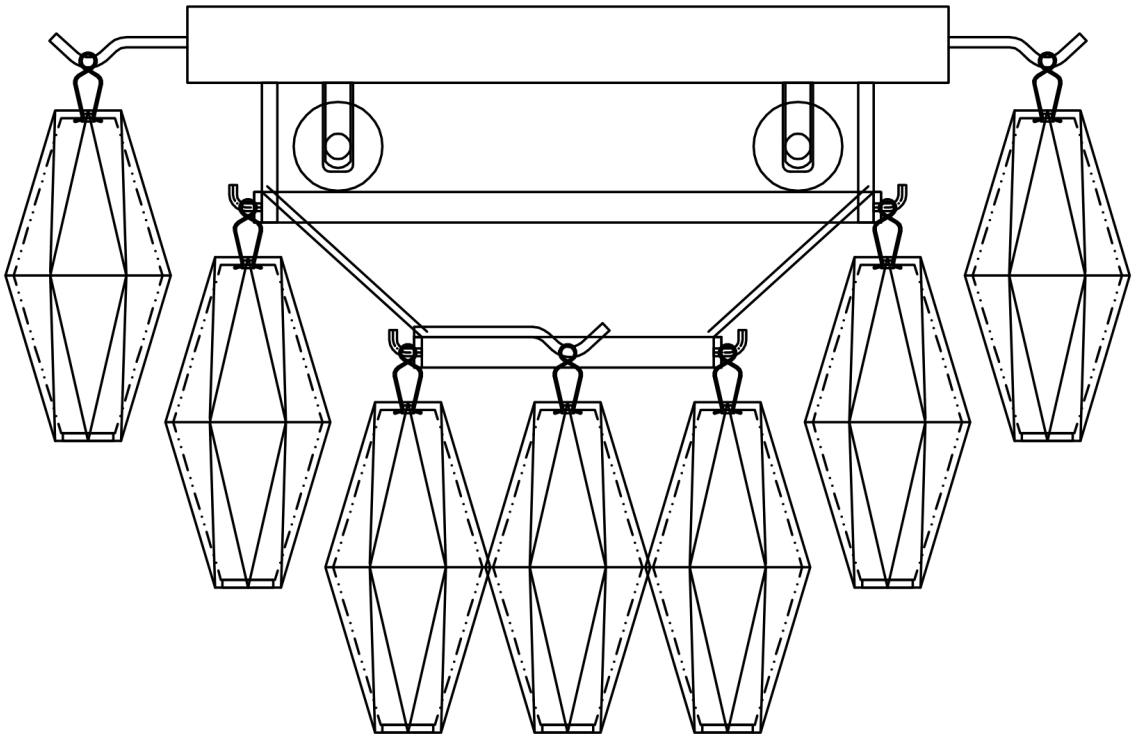

Model **YIOSI-0674**

Please read this guide completely before you begin, and keep it for future reference.

BEFORE YOU BEGIN

⚠ **WARNING**

- **Turn off the power at the circuit breaker** before installing, changing bulbs or cleaning the fixture.
- Installation by a **qualified electrician** is recommended. Install in accordance with local electrical codes.
- This fixture uses 3 E12 bulbs, 5 W each (supplied). Replace only with bulbs of the same type and rating.
- Do not clean the fixture with corrosive substances such as gasoline or alcohol-based disinfectants.
- Use this fixture only for its intended purpose. Do not modify or rewire it.
- Keep small parts and packaging away from children. They can cause serious injury.
- Check that the spring clip on every glass piece is securely closed.


PREPARATION

- Read every step carefully and follow them in order.
- Unpack and check all parts against the parts list. If anything is missing or damaged, contact us before installing (see the last page). We will send replacement parts promptly.
- Assemble the fixture where it will be installed. Moving it mid-assembly risks losing small parts.

SPECIFICATIONS

LIGHT SOURCE	COLOR TEMPERATURE	MOUNTING
3 × E12 bulbs, 5 W each (included)	**3000K**	**Ceiling, over a junction box**

IN THE BOX

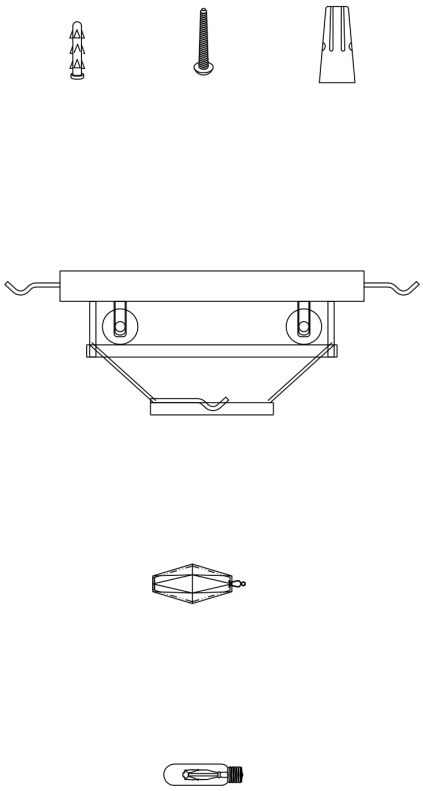


PART	QTY	DESCRIPTION
A	× 1	Fixture body
B	× 37	Glass (+2 spare)
C	× 3	E12 bulb (+1 spare)
—	× 1	Hardware pack (wall anchors, screws, wire connectors)

INSTALLATION

STEP 1

Mount the plate


Turn off the power at the circuit breaker. Fix the mounting plate to the ceiling junction box with the screws.

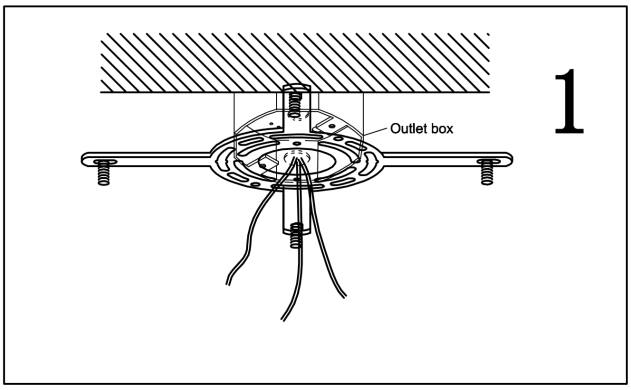

STEP 2

Connect and secure the body


Join the fixture wires to the matching house supply wires with the wire connectors: live to live, neutral to neutral, ground to ground. Lift the fixture body (A) up to the mounting plate and fasten it with the screws.

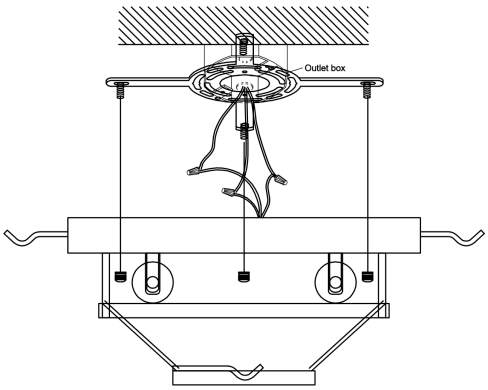

STEP 3

Fit the bulbs and glass

Screw the three E12 bulbs (C) into the lamp holders. Hang the glass pieces (B) on the hooks of the fixture body. Re-fix any spring clip that has come loose. Restore power and switch on to test.

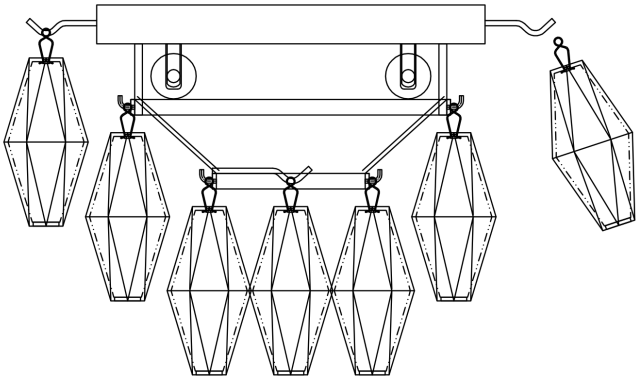

CARE & SUPPORT

CLEANING & CARE

- Clean the fixture about once a month to keep it looking its best.
- Turn off the power and let the fixture cool to room temperature first.
- Wipe with a soft cloth dampened with water and wrung dry. Never spray liquid directly onto the fixture.
- Do not use gasoline, alcohol or other corrosive cleaners.

GOOD TO KNOW

- Use the fixture only as designed. Damage caused by modification, third-party parts or natural disasters is not covered.
- Warranty terms are listed at yiosilamp.com.

NEED HELP?

support@yiosilamp.com

+1 970-896-9411

Missing parts, installation questions or anything else, we are here to help. Please include your order number and a photo of the issue so we can resolve it quickly.