
YIOSI

INSTALLATION GUIDE

23.6" Hook Plate Amber Glass Round Chandelier

CHANDELIER · CEILING MOUNT

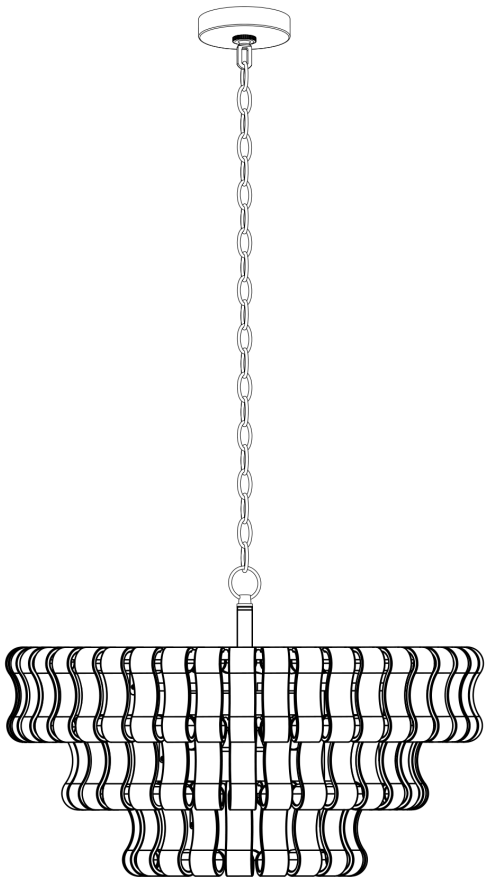

Model **YIOSI-0768**

Please read this guide completely before you begin, and keep it for future reference.

BEFORE YOU BEGIN

⚠ **WARNING**

- **Turn off the power at the circuit breaker** before installing, changing bulbs or cleaning the fixture.
- Installation by a **qualified electrician** is recommended. Install in accordance with local electrical codes.
- This fixture requires 4 E12 bulbs, max. 40 W each. Do not exceed the rated wattage.
- Do not clean the fixture with corrosive substances such as gasoline or alcohol-based disinfectants.
- Use this fixture only for its intended purpose. Do not modify or rewire it.
- Keep small parts and packaging away from children. They can cause serious injury.


PREPARATION

- Read every step carefully and follow them in order.
- Unpack and check all parts against the parts list. If anything is missing or damaged, contact us before installing (see the last page). We will send replacement parts promptly.
- Assemble the fixture where it will be installed. Moving it mid-assembly risks losing small parts.

SPECIFICATIONS

LIGHT SOURCE	MAX. WATTAGE	MOUNTING
4 × E12 bulbs	**40 W per bulb**	**Ceiling, adjustable chain**

IN THE BOX

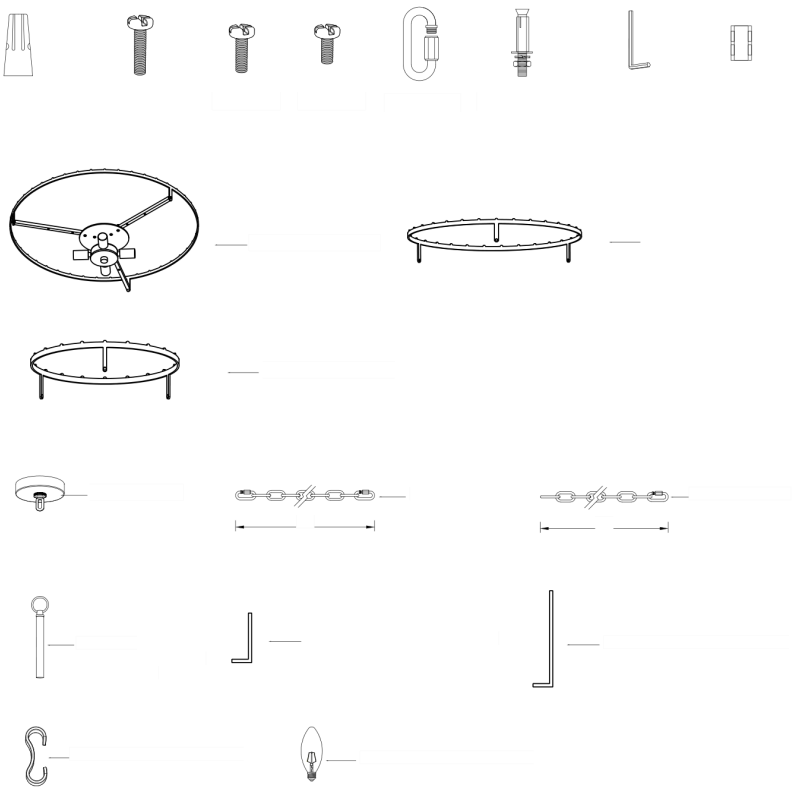


PART	QTY	DESCRIPTION
A–C	× 3	Light frames: top (A), middle (B), bottom (C)
D	× 1	Canopy
E / F	× 3	Chains: 2 long (E), 1 short (F)
G	× 1	Boom
H / I	× 8	Connectors: 4 short (H), 4 long (I), incl. 1 spare each
J	× 99	Amber glass hook plate (94 + 5 spare)
K	× 5	E12 bulb (4 + 1 spare)
—	× 1 set	Hardware kit: wire connectors, screws, anchors, quick link, hex key (spares included)


INSTALLATION

STEP 1

Assemble the frame

Join light frames A, B and C with the short connectors (H) and long connectors (I), as shown.

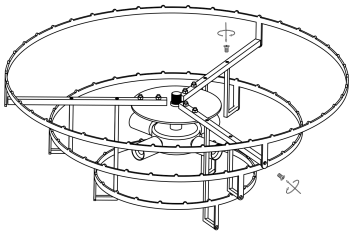


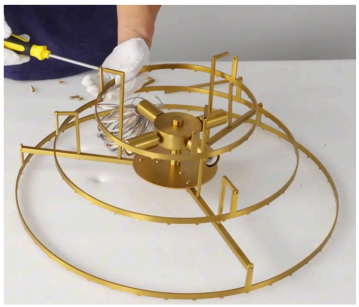


STEP 2

Attach the boom and chain

Feed the power cord through the boom (G) and fix the boom to the top of the frame. Link the chain between the boom and the canopy (D), weaving the cord through the chain up into the canopy.

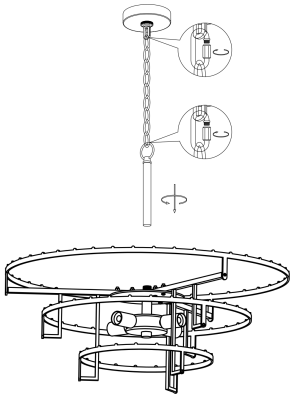


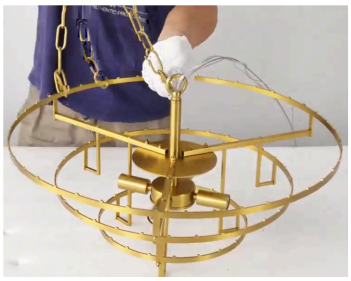

STEP 3

Mount and wire


Turn off the power at the circuit breaker. (1) Fix the mounting plate to the ceiling with the screws and anchors. (2) Join the fixture wires to the matching house supply wires with the wire connectors: live to live, neutral to neutral, ground to ground. (3) Fasten the canopy to the plate. (4) Screw the 4 E12 bulbs into the lamp holders.

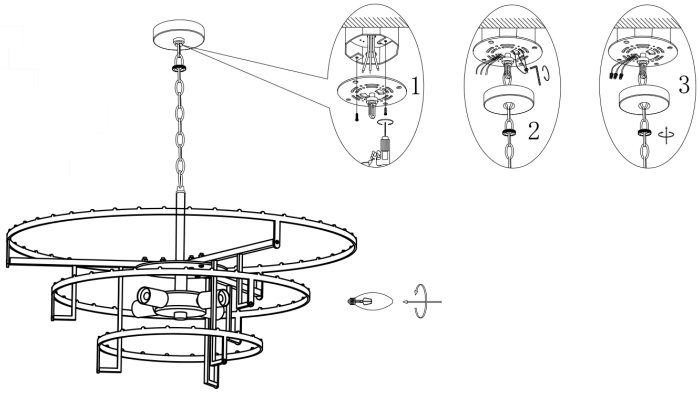

STEP 4

Hang the glass pieces

Hook the amber glass pieces (J) onto the three tiers: 43 on the top tier, 31 on the middle tier and 20 on the bottom tier. Restore power and switch on to test.

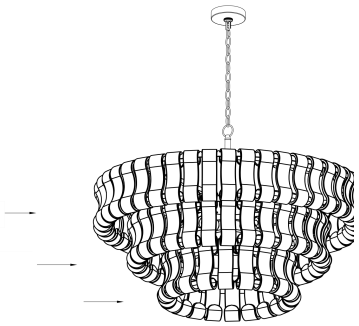



CARE & SUPPORT

CLEANING & CARE

- Clean the fixture about once a month to keep it looking its best.
- Turn off the power and let the fixture cool to room temperature first.
- Wipe with a soft cloth dampened with water and wrung dry. Never spray liquid directly onto the fixture.
- Do not use gasoline, alcohol or other corrosive cleaners.

GOOD TO KNOW

- Use the fixture only as designed. Damage caused by modification, third-party parts or natural disasters is not covered.
- Warranty terms are listed at yiosilamp.com.
- The parts list counts the bulbs (K) as part of the package; check for them on unpacking.

NEED HELP?

support@yiosilamp.com

+1 970-896-9411

Missing parts, installation questions or anything else, we are here to help. Please include your order number and a photo of the issue so we can resolve it quickly.